

Low-Volume Liquid & Powder Adapter

Use instructions

1



Remove lid from slide

2



Fill slide with sample
(avoid contamination
with a pipette or
utensil)

3




Place the lid back on
the slide — there may
be some overflow (this
is ok as it helps prevent
air bubbles)

4



Insert the slide into the
base of the adapter

5

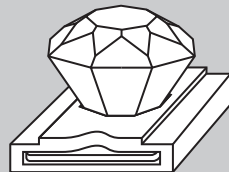

Place the Nix QC into
the octagon opening
(at the top of the
adapter). You're now
ready to scan!

PLEASE NOTE: When placing the lid back on the slide, try to avoid air bubbles. It's best to overfill the slide rather than underfill as this will help reduce any bubbles that might come up. If you have any questions, please contact us at qc.support@nixsensor.com